 


UK SECURITY PANELS

SUMMARY OF MENU OPTIONS

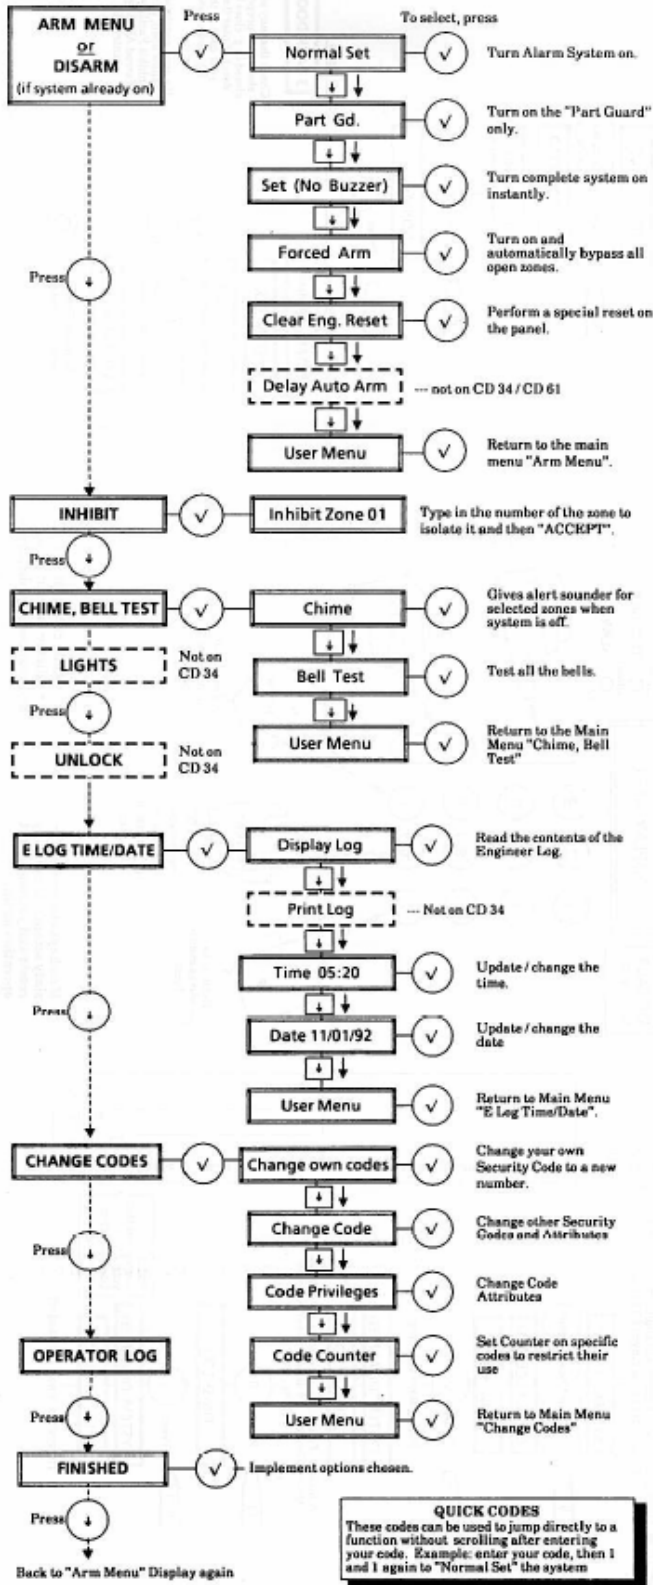


Quick Codes	
1, 1	
1, 2	
1, 3	
1, 4	
1, 5	

Quick Codes	
2, NN	

Quick Codes	
3, 1	
3, 2	

QUICK CODES
 These codes can be used to jump directly to a function without scrolling after entering your code. Example: enter your code, then 1 and 1 again to "Normal Set" the system


SWITCHING OFF THE SYSTEM
ENTERING THE BUILDING
AFTER AN ALARM ACTIVATION

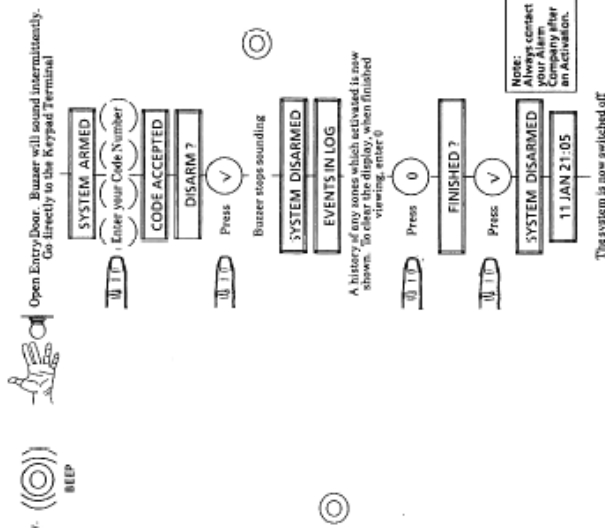

ARITECH ADVISOR

USER MANUAL



SWITCHING SYSTEM ON
AND LEAVING THE BUILDING

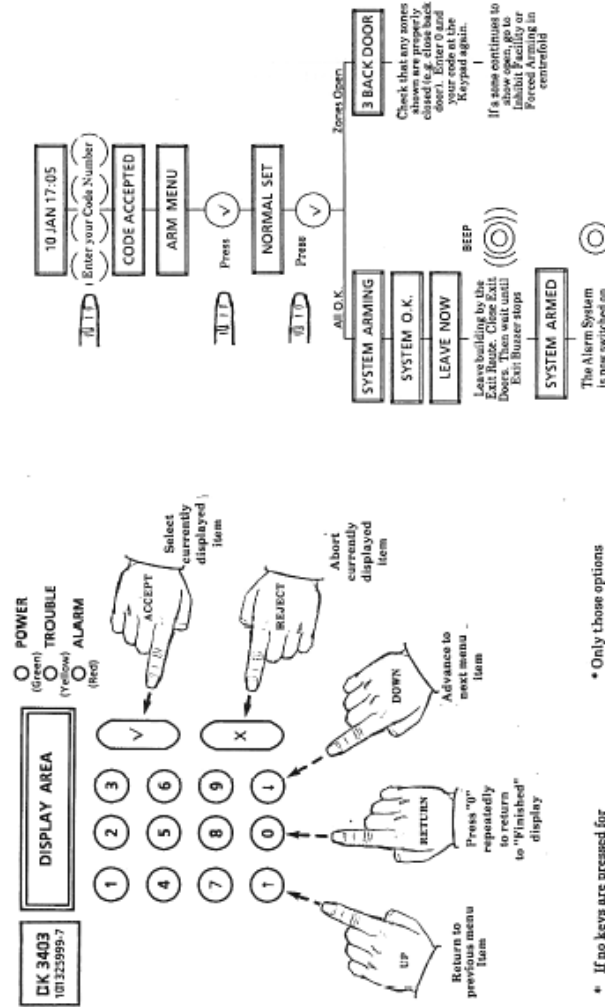

* If no keys are pressed for sixty seconds, the display reverts and you must start operation again.

* Only those options available for your panel and your code are displayed


141513999 6

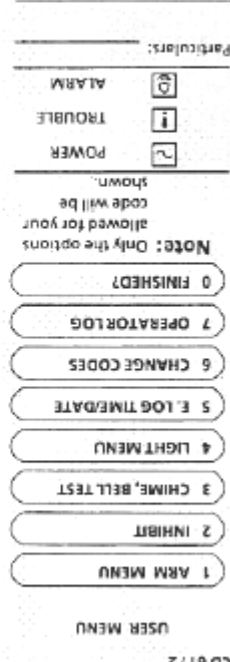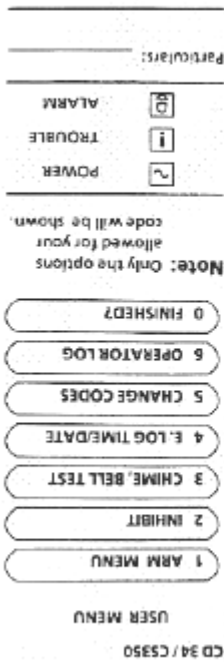

SWITCHING OFF THE SYSTEM ENTERING THE BUILDING




 Open Entry Door. Buzzer will sound intermittently.
Go directly to the Keypad Terminal

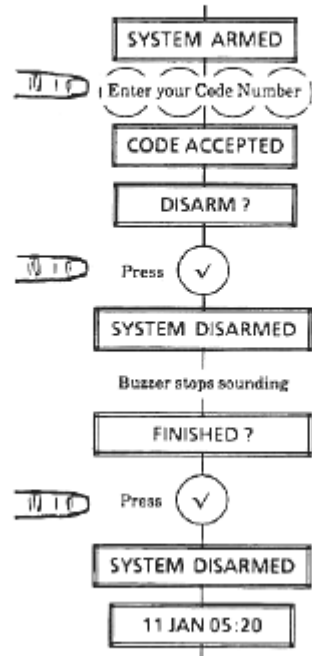

The system is now switched off

The Alarm System is now switched on

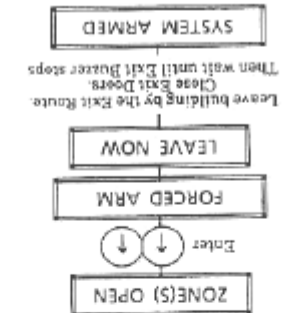

The operators may switch on the system when a number of zones are open, without having to inhibit each zone separately.

FORCED ARMING

All inhibits are cancelled when the system is next switched off.

The above procedure can also be used to bypass closed zones. In this case '1' and the zone number should be entered for these zones also. (e.g. 1 7 1 2 1 1 is entered to inhibit zones 7, 2 and 1).

NOTE: Each time you enter your code to turn on the system you must inhibit the zones again if they are still faulty.



For Alarm Zone with Permanent Fault

Enter '1' and the Zone Number for each Faulty Zone (e.g. 1 3 1 8 in this case)