


2 + 3

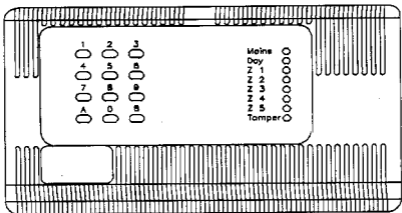

CHALLENGER 5

5 ZONE

SECURITY SYSTEM

USER

INSTRUCTIONS

USING YOUR ALARM SYSTEM

UNSET

When the control panel is in the unset mode (day mode) it will go into alarm if any wiring is tampered with or if a personal attack is activated.

FULL SET

When the user code has been entered and the exit time has stopped, the control panel is now set and all detectors become operational. When a detector is activated, this will cause the control panel to sound with either an entry tone or full alarm condition.

PART SET

The control panel has the facility to allow the system to be part set which will allow you to move around in certain areas while other areas are protected by the system.

E.g. Downstairs protected. Upstairs Unprotected, allowing you to move around

USER CODE

The control panel will only operate once the user code has been entered. The user code is a four digit code. Factory set at 1 2 3 4. This code should be changed after installation to a code of your choice. This code can be changed at any time.

If this code is forgotten, the installer will have to reset the system to factory settings and be reprogrammed.

CHANGING THE USER CODE

(FACTORY SET CODE)

PRESS 1 2 3 4 Exit tone starts.

PRESS A 9 1 Exit tone stops.
Zone L.E.D's 2, 3, 5 and tamper illuminate

PRESS ? ? ? ? As each digit is entered one L.E.D. will extinguish. When last digit is entered an acceptance tone is heard. And the panel reverts to day mode.

(NEW USER CODE)

USING YOUR ALARM SYSTEM - CONTINUED

FULL SETTING THE SYSTEM

PRESS ? ? ? ? The exit tone will start.

(4 DIGIT USER CODE)

Leave premises via exit route. Once exit tone stops, the system will set.

PART SETTING THE SYSTEM

PRESS ? ? ? ? The exit tone will start.

(4 DIGIT USER CODE)

PRESS A 0 The exit tone changes to a lower tone.

The zones which are programmed for part set will be flashing during the exit time.

UNSETTING THE SYSTEM

Enter premises via entry route. Entry tone starts.

PRESS ? ? ? ? The entry tone will stop.
Control panel reverts to day mode.

(4 DIGIT USER CODE)

USING YOUR ALARM SYSTEM - CONTINUED

UNSETTING THE SYSTEM AFTER AN ALARM CONDITION

PRESS [?] [?] [?] [?] The external sounders will stop. And the activated zone will be illuminated.

(4 DIGIT USER CODE)

PRESS [?] [?] [?] [?] Two tone sound is heard. Activated zone remains illuminated.

(4 DIGIT USER CODE)

PRESS [B] Zone L.E.D. extinguishes. Two tone sound stops and panel reverts to day mode.

ISOLATING ZONES

PRESS [?] [?] [?] [?] The exit tone will start.

(4 DIGIT USER CODE)

PRESS [A] Enter the number of the zone you require to isolate.

Once you have entered the zone to be isolated, this will indicate by flashing the appropriate zone L.E.D. while the exit tone is heard. The control panel will now set once the exit time has stopped.

USING YOUR ALARM SYSTEM - CONTINUED

CHIME SETTING

When the control panel is in the unset position (day mode) any detector can make the control panel chime when activated. This function can be switched on and off at any time.

PRESS [?] [?] [?] [?] The exit tone will start.

(4 DIGIT USER CODE)

PRESS [A] [9] [5] The exit tone will stop. Existing programmed chime zones will illuminate

Press the zone number relating to the zone you wish to apply or remove chime

PRESS [A] Acceptance tone is heard. Panel reverts to day mode.

PLEASE NOTE

If the installer is using the factory setting, the chime facility will be disabled.

If chime facility is required, see page 18 in the installation instructions, and programme the zone with one of the three options offered.

